

ML-020 series Small Sensors

High performance


Combining the special designed filters with the high efficient detector makes it possible to characterize "spectral response" which is close to the ideal response. Temperature dependence is quite small, max. 1%, in actual measurement.




The sensors are suitable for the use in limited space and at multi point measurement.




The sensors are designed to use continuously in all weather condition.

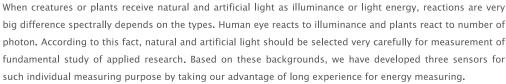

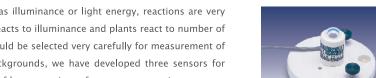


with option leveling plate


PRINCIPLE OF **MEASUREMENT**

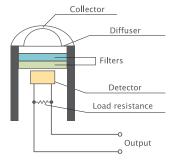


Special designed collector and diffuser are mounted on the upper part of the detector. This optical component realizes excellent character for cosine response and sensitivity. The transmitting light flux reached to the filters whose spectral response coincides for individual measuring purpose illuminance, photon number and irradiance, as shown in the following figure, the Siphotodiode detects the flux through the filters and converts accurately to electric signal proportional to the flux.


PSPECTRAL CHARACTERISTICS

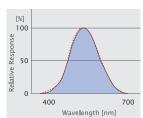

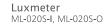

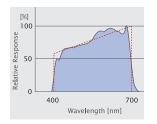


Photon sensor MI-020P

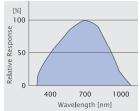

Pvranometer ML-020VM

Specifications

	Luxmeter		Photon sensor	Pyranometer
	ML-020S-O	ML-020S-I	ML-020P	ML-020VM
	High illuminance	Low illuminance		
Spectral response	CIE Photopic Curve		Photosynthetically	Solar Irradiance
			Photon Flux Density	(300 to 1100nm)
Measuring range	~150,000	~30,000	~3000	~1.4
Unit	lx	Ix	μmol•s ⁻¹ •m ⁻²	kW/m ²
Output	~30mV	~30mV	~10mV	~10mV
Internal resistance	280 Ω	1.3 kΩ	160 Ω	10 Ω
Temperature response	0.4%	0.4%	1.1%	0.5%
(-10 to +50°C)				
COS response	1 / 1.5 / 17%			
(at 30/60/80 deg.)				
Spectral error	2.3%	2.3%	7.7%	_
Output cable	5m, standard			

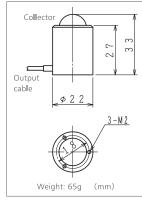











1-6 Sasazuka Center Bldg., 2-chome Sasazuka,Shibuya-ku Tokyo 151-0073,Japan PHONE: 81-3-5352-2913 FAX: 81-3-5352-2917 http://www.eko.co.jp E-mail: info@eko.co.jp